

Caribou Case Liner Retrofit for 35L Pelican Cases

Read all instructions before starting installation. If there is a problem please call or email us. We are not responsible for incorrectly drilled cases.



Parts List:

- 2 35L Case Liner
- 8 Snap Fastener Screw Stud
- 8 #8-32 Nylock Nut
- 8 #10-24 x 5/8" L Button Head Screw with Sealing Washer
- 8 #10-24 Nylock Nut
- 8 #10 Washers
- 4 #6 Pan Head Screw
- 4 #6 Washer


NOTE: The #8-32 and #10-24 Nylock nuts appear nearly identical, so carefully segregate them first.

NOTE: If you have an existing pair of Caribou cases, you will need to remove the lanyards and fill the holes or put screws, nuts and bolts in them to seal them up. Or, just leave them in.

1) Measuring up from a flat surface, drill four 3/16"(5mm) diameter holes as shown as accurately as possible. First holes are 3-1/4" (82.5mm) up from the bottom, and the second holes are 14-1/2" (362mm) up from the bottom. The holes are 1.7"(43mm) apart centered across the seam. A drill bit with an extended point works best, or make an indentation with a sharp pointed tool first to avoid having the drill bit "walk." Clean the plastic burrs from the holes.

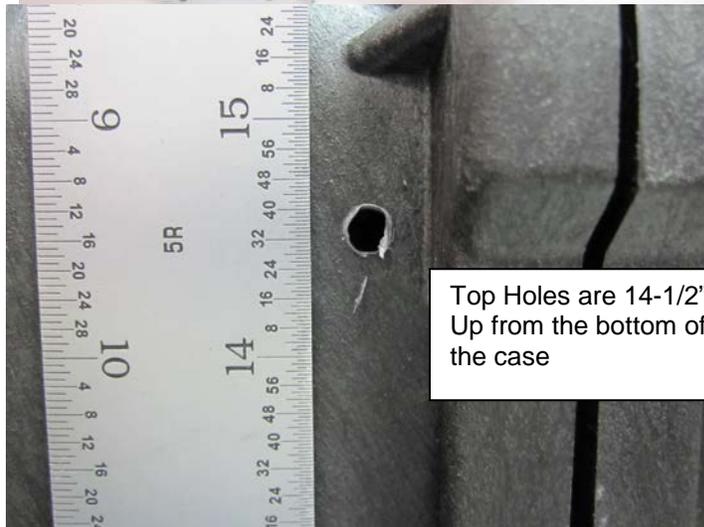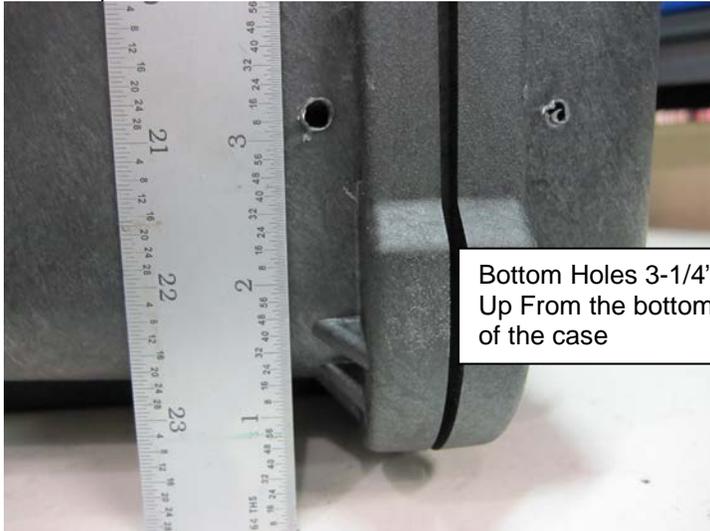

2) Install the snap fastener studs into the lid of the case with the snap fastener inside the case and the #8-32 nylock nut outside the case as shown.

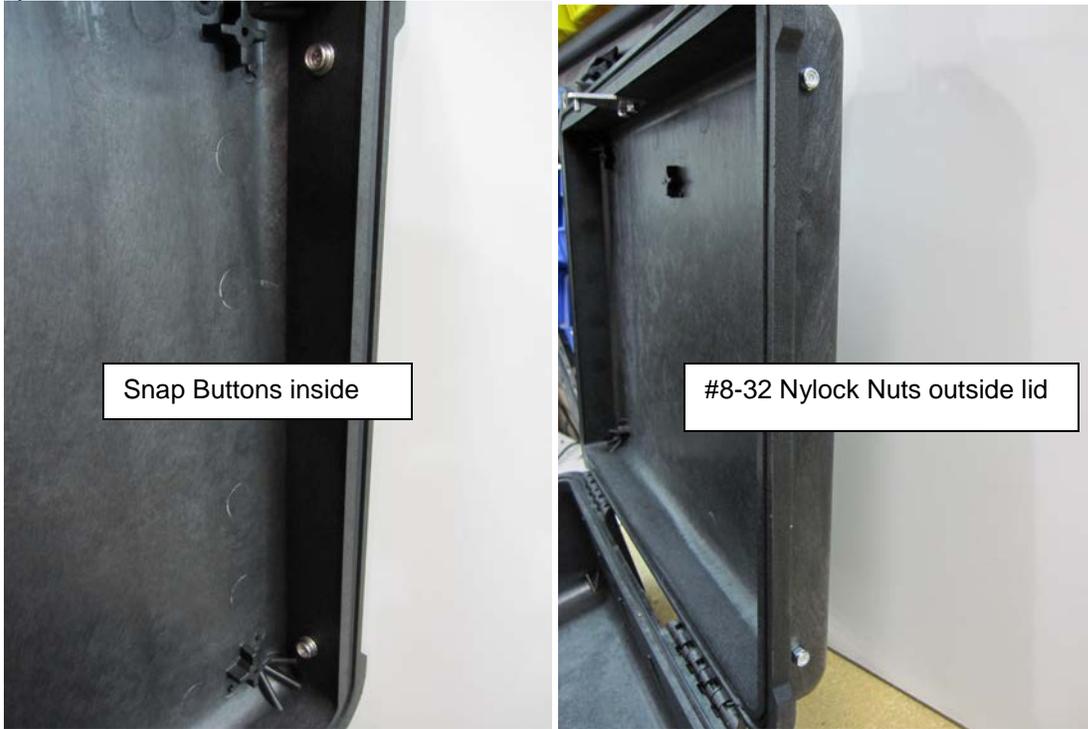

3) Install the liners to the main case with the #10-24 Button Head Screws with Sealing Washers outside the case, and the #10-24 Nylock Nuts and Washers inside the case and liner as shown.,



4) Insert the #6 screws with washers into the holes in the liner, center the liner exactly between the sides of the case, and drive the screws into the case. Keep the liner very taught when doing this. If your cases are existing Caribou cases, then they will have the elastic straps with #6 screws and washers as shown below.



5) Snap the liner to the lid and you are done.

Copyright CCS Corp, 2013 – All rights Reserved